


Langstroth box assembly instruction

Step 1

Fit the 4 sides together tightly to make a box. Be sure the handles are on the upper outside of the box and the frame rest groove is on the inside.

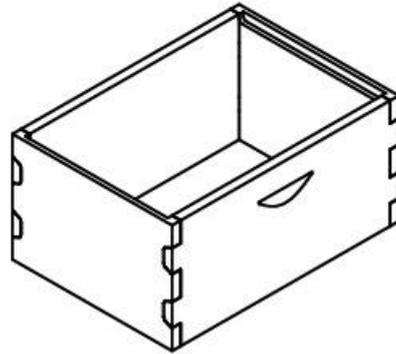

Step 2

Nail/screw the panels together, you will need 6 nails for each corner for a brood box and 4 for a super. Check to make sure the corners are at 90° angles as you assemble. Repeat these steps for each hive box.

